

PM-04M


Industrial Ultrasonic Humidifier

Technical Datasheet

1. General Description

The **PM-04M** is a compact industrial ultrasonic humidifier designed for localized humidity control in workshops, laboratories and industrial equipment. Utilizing high-frequency ultrasonic atomization technology, it generates fine mist efficiently while maintaining low energy consumption. The unit features manual humidity control, continuously adjustable mist output and direct water supply, making it suitable for reliable long-term operation.

The PM-04M is suitable for standalone humidification or short-distance ducted humidification applications.

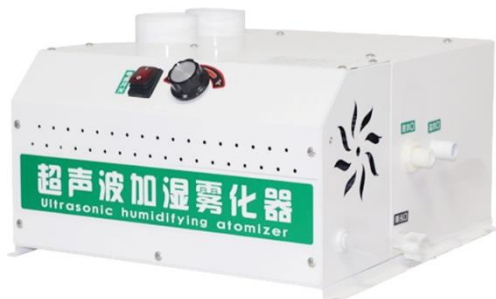

2. Technical Specifications

Item	Specification
Model	PM-04M
Humidification Capacity	4 L/h
Recommended Coverage	50–70 m ² *
Maximum Power Consumption	700 W
Power Supply	AC 220–240 V, 50/60 Hz
Control	Manual Humidity Control
Mist Output	Continuously Adjustable
Water Supply	Direct Water Supply
Mist Outlet	2 × Ø75 mm
Recommended Duct	PVC Pipe (Ø75 mm)
Maximum Recommended Duct Length	4–5 m
Dimensions (L × W × H)	450 × 450 × 230 mm
Net Weight	12 kg
Atomizing Heads	2 × 6-head Modules

****Coverage depends on ceiling height, ventilation rate, target humidity and application.***

3. Key Features


- Manual humidity control
- Continuously adjustable mist output
- Direct water supply
- Compact industrial design
- Stable continuous operation
- Low energy consumption
- Easy maintenance

4. Applications

- Laboratories
- Environmental Test Chambers
- Packaging Equipment
- Printing Equipment
- Electronics Manufacturing
- Small Workshops

5. Installation Notes

- Standard outlet diameter: Ø75 mm
- Standard PVC pipes are recommended for duct installation.
- Keep duct length within the recommended range.
- Avoid unnecessary bends to maintain optimum mist delivery.
- Final installation should be adjusted according to the application.

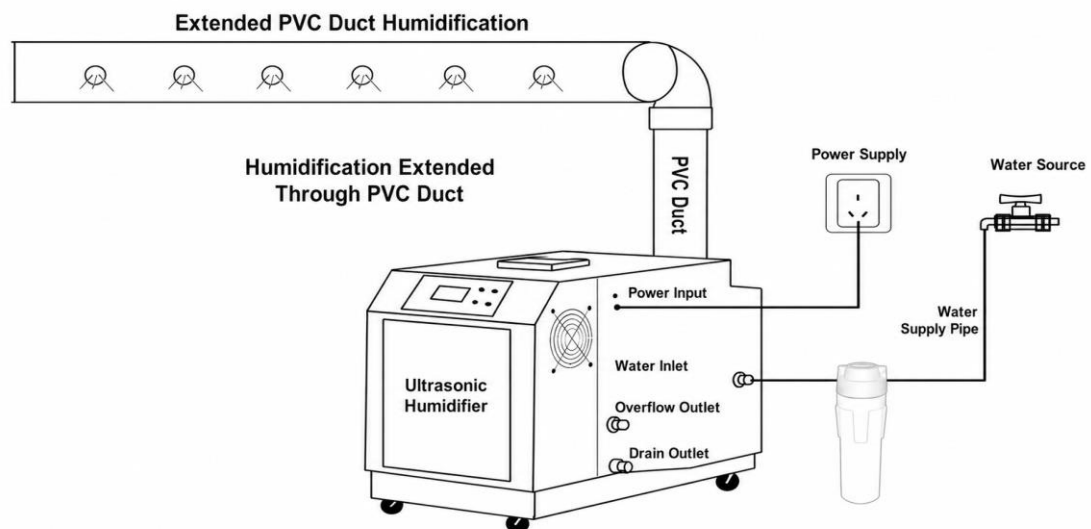

6. Water Quality

Clean tap water is suitable for most applications.

For better long-term performance and reduced scale buildup, RO water or softened water is recommended where available, especially in hard water areas.

Regular inspection and cleaning are recommended to maintain optimum performance.

Recommended maintenance guidelines:

- Inspect the atomizing discs regularly. More frequent inspection and cleaning may be required in hard water applications.
- As a general guideline, inspect and clean every 2 months in poor water quality and every 6 months in good water quality.
- Clean the atomizing modules using a soft brush and a mild acidic descaling solution.

7. Engineering Support

For project evaluation, please provide your application, installation method and approximate installation space.

Our engineering team can recommend the appropriate model and installation method according to your application requirements.